
User's Manual



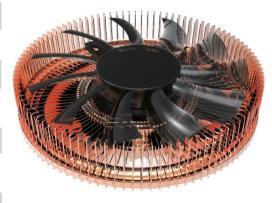

Intel Socket LGA 1155 / 1156 / 1150 / 775 CPUs AMD Socket FM2 / FM1 / AM3+ / AM3 / AM2+ / AM2 CPU&APUs

To ensure safe and easy installation, please read the following precautions.

www.ZALMAN.com

Ver. 130620

1. Precautions

- 1) Avoid inserting objects or hands into the fan while it is in operation to prevent product damage and injuries.
- 2) Do not ingest the Thermal Grease, and avoid its contact with skin and eyes. If contact is made with skin, wash off with water. If ingested or irritation persists, seek medical attention.
- 3) To prevent possible injuries, gloves must be worn while handling this product.
- 4) Excessive force exerted on the fan may cause damage to the fan and/or system.
- 5) Use and keep the product away from reach of children.
- 6) Check the components list and condition of the product before installation. If any problem is found, contact the retailer to obtain a replacement.
- 7) Zalman Tech Co., Ltd. is not responsible for any damaged due to overclocking.
- During transportation of the system, the cooler must be removed.
 Zalman is not responsible for any damages that occur during the transport of a system.
- 9) Product design and specifications may be revised to improve quality and performance.

Disclaimer) Zalman Tech Co., Ltd. is not responsible for any damages due to external causes, including but not limited to, improper use, problems with electrical power, accident, neglect, alteration, repair, improper installation, or improper testing.


Model CNPS2X Spec. Material Pure Aluminum & Copper Weiaht 83a Dimensions 84(L) x 84(W) x 27(H) mm Bearing Long Life Bearing RPM 1,500 ~ 2,600RPM ±10% Fan Noise Level 17.4 ~ 22.7dBA +10% Voltage 12V Contents 1g Thermal Grease [ZM-STG2M] Temperature -40°C ~ +150°C (-40°F ~ +302°F) Range

2. Specifications



3. Components

1) Common Components

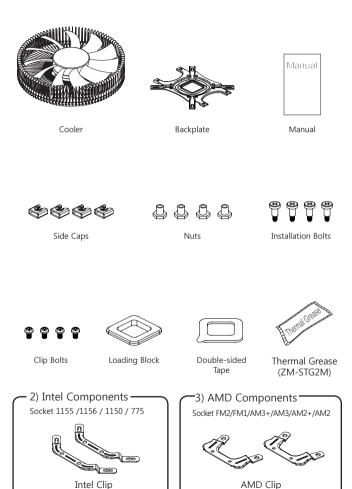





4.Installation

A. Clip Installation


- X Install the clip according to a user socket as shown in the image.
 - install the clip that fits the socket using the clip bolt

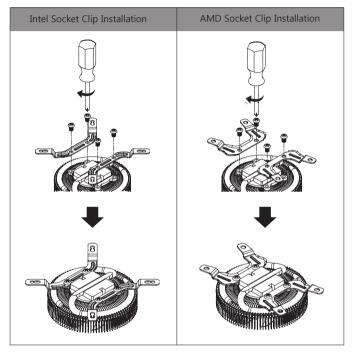

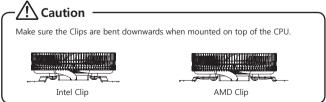




B. Nuts and Side Caps

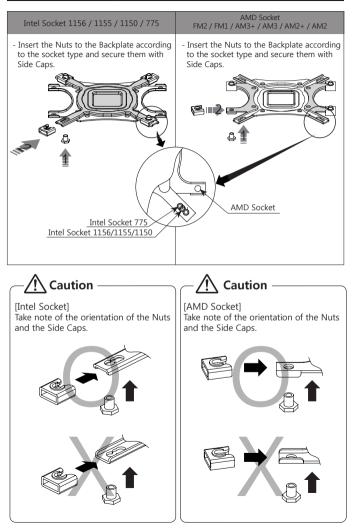


C. Double-sided Tape and Loading Block Installation

X Intel Socket 1156/1155/1150 Installation does not require the Loading Block.

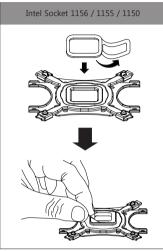


Caution

Please note that the sticky side of the Loading Block serves to attach the Loading Block to the backplate.

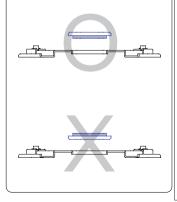


Intel Socket 775 AMD Socket FM2/FM1/AM3+/AM3/AM2+/AM2


 Peel off the Loading Block cover and attach it to the Backplate with the sticky side facing the center of the Backplate.

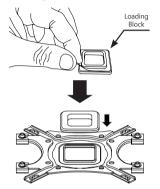

② Peel off one side of the Double-sided Tape and attach it with the sticky side facing the Loading block. Then, peel off the top cover.

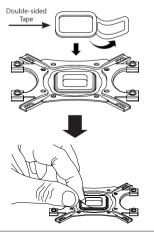


D. Backplate Installation

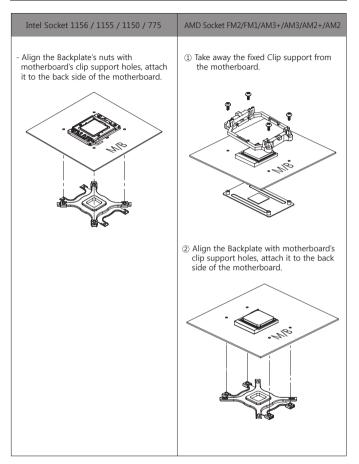


E. Cooler Installation

 Apply a suitable amount of thermal grease on the center of the CPU, then mount the heatsink and fasten the installation bolts based on the CPU socket type.

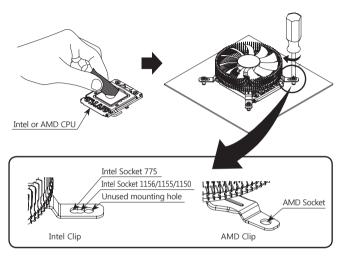


- <u>A</u>Caution-

When installing the heatsink on a tower case, make sure the heatpipe on the base is parallel to the ground, as installing it perpendicularly may limit the cooling performance.

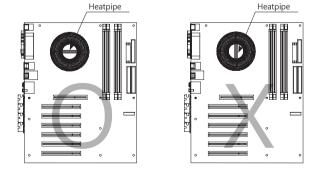



② Connect the cooler's 4-pin connector to the motherboard's CPU Fan header.

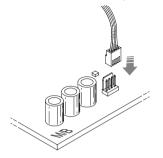

Caution-

After installing, be sure to activate the PWM control mode in BIOS on the motherboard.

